




2024+



## JL Powertop Install Instructions:



\*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.

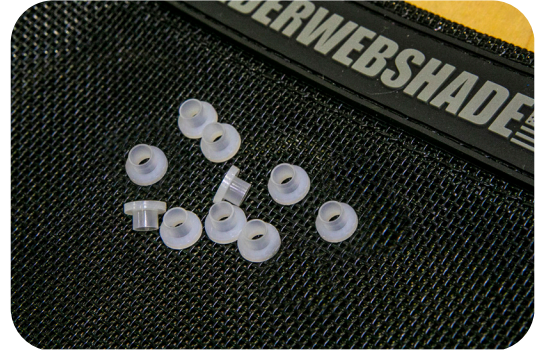


1

Locate the correct (10) factory T25 screws to remove and add the custom SpiderNubs then replace the (10) factory T25 screws. 4 per side. Add in flat side up and tighten flush, don't over tighten.

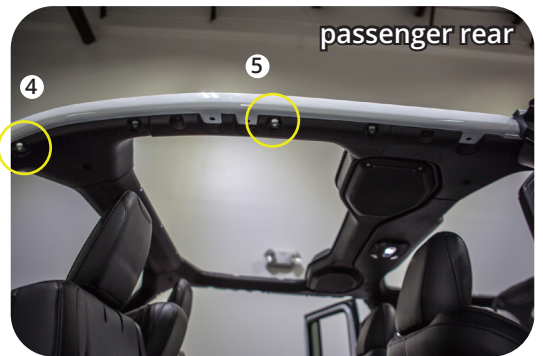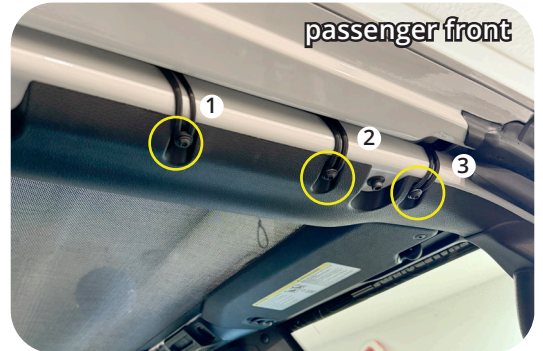

2

Use the leverage strap to pull the shock cord in-between the Power top and the roll cage. This will be a snug fit.

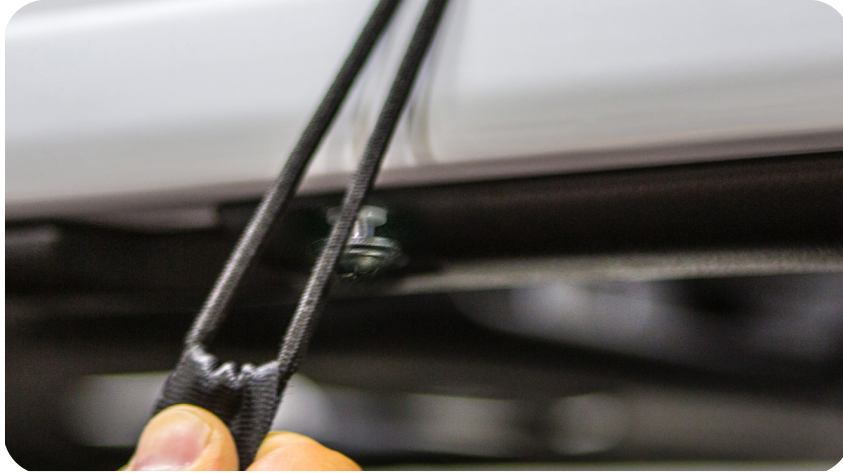

3

Attach the (10) shock cord loops to the new SpiderNub mounting locations and your install is complete.





**SPIDERWEBSHADE.COM**  **BUY AMERICAN**